



Ecodeck Rubber Safety Matting

Installation Guide

How to install:

1. Mark out the area. Mats can be laid directly onto existing grassed areas. If the area is uneven, fill in with topsoil and ensure that it is compacted and seeded.

2. Leave about 150mm in from the outside edges.


3. Unroll the mesh and then lay the Ecodeck Rubber Safety Matting over the mesh area to be covered, cutting around any equipment or obstacles if necessary.

4. Cut about 75mm deep into the ground along the outside edge of the perimeter area to be covered using a grass edge cutter or similar.

5. Roll back the Ecodeck Rubber Safety Mat and, starting about 150mm in from the outside edge of the mats, use a spade angled towards the 75mm deep cut and cut the top turf away. This will leave a wedge shape channel. Continue around the perimeter of the mats. FIG. 1

6. Roll the Ecodeck Rubber Safety Matting back and down into the channel and, if the surface is hard, make a pilot hole prior to inserting the pegs. Peg the edge through the large holes in the mat and into the ground. Use 3 pegs per mat. You should now have a ramp edge all the way around.

7. Cover the ramped area with topsoil and seed. Bring the level back up to its original level and flatten into the existing ground. FIG. 2

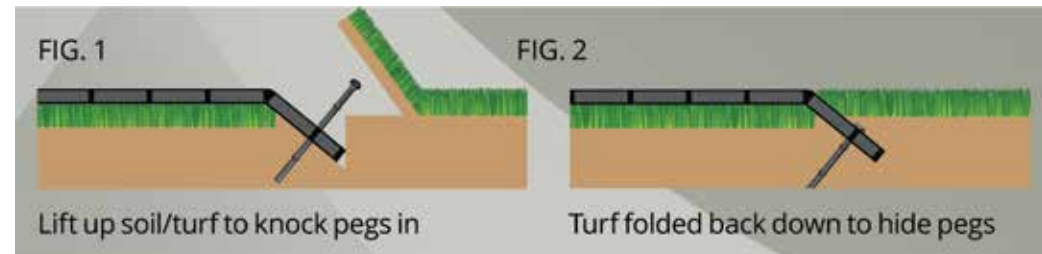

Tools Required:

- 5m tape measure
- Stanley knife,
- Rubber gloves
- Hammer
- Grass edge cutter
- Spade
- String or spray paint
- Rechargeable drill and 6mm drill bit.

Frequent watering is essential for optimum grass growth.